

VIPER[®]

NO ONE DARES
COME CLOSE[®]



OWNER'S GUIDE

MODEL
4105V

Congratulations

Congratulations on the purchase of your state-of-the-art keyless entry and remote start system. Reading this Owner's Guide prior to using your system will help maximize the use of your system and its many features. Please visit: www.viper.com – For general and additional guide information. For any additional questions please contact your authorized Directed dealer or contact Directed at **1-800-753-0600** (U.S. only). Additional support is also available at: <http://support.directed.com>.

What's included

Welcome to the best generation of security. Your system contains everything you need.

- Two 4- button remote controls (P/N 7145V)
- Owner's guide and warranty registration card

Your warranty

Your system comes with a warranty. Make sure you receive the warranty registration card and proof of purchase from your dealer indicating the product was installed by an authorized Directed dealer. Please validate it online at www.prodregister.com/directed or complete and return the warranty registration card.

Important information

Government Regulations and Safety information




Read the *Government Regulations* and *Warning! Safety First* sections of this manual prior to operating this system.

Warning! Failure to heed this information can result in death, personal injury or property damage and may also result in the illegal use of the system beyond its intended purpose.

Contents

Congratulations	i
What's included	i
Your warranty.....	i
Important information	ii
Government Regulations and Safety information	ii
Remote Control	3
Remote control functions.....	4
Standard configuration.....	4
Using the system	6
Locking.....	6
Unlocking	6
Disabling (optional) Starter Kill	6
Panic Mode	7
Remote Start.....	7
Valet Take-Over	9
Car Finder	9
Battery Information	10
Battery replacement	10
Battery Disposal	10
Patent Information	10
Government Regulations	11
Warning! Safety first	12
Caution	13
Limited lifetime consumer warranty	14

Remote Control

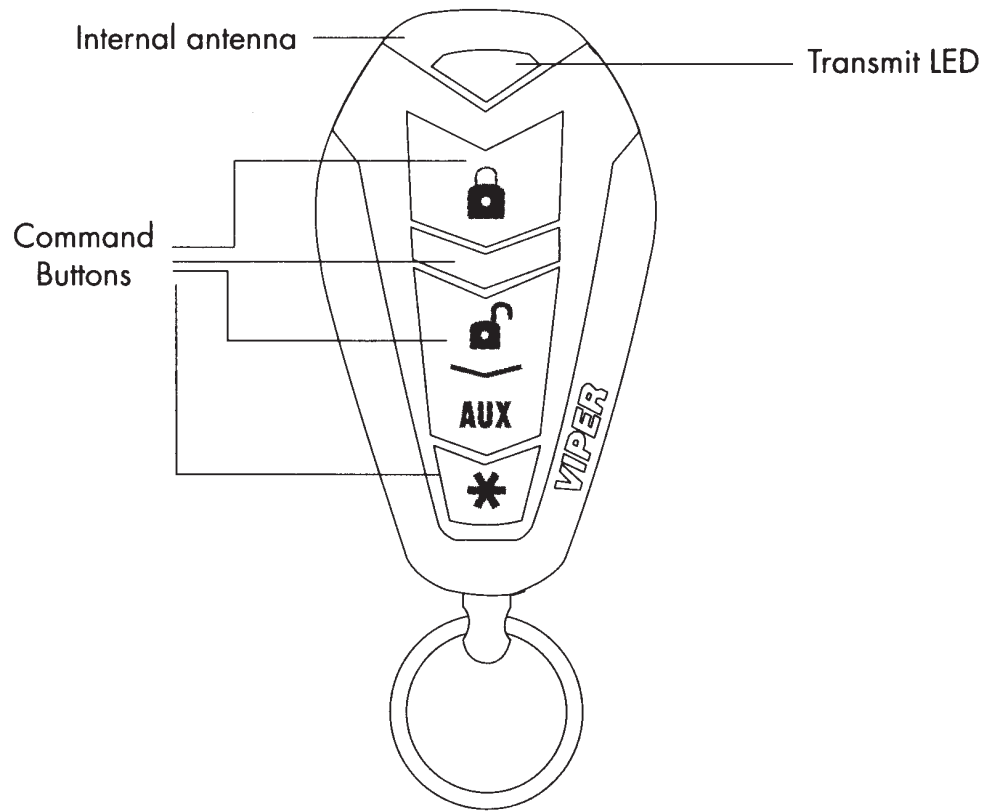


Feature	Description
Internal Antenna	Used for transmitting information
Transmit LED	Active when transmitting information
Command buttons (4)	Used to perform arming, disarming, auxiliary channel and remote start commands

Remote control functions


The remote buttons are used to send commands to the system. The buttons indicated below are for standard configuration.

Standard configuration

Button

The lock function is controlled by pressing  on the remote control for one second. When held for approximately two seconds, Panic is activated.

Button

The unlocking function is controlled by pressing  on the remote control for one second. You can also turn Panic off with this button.

AUX Button

Silent Mode™ and an optional auxiliary function are controlled by pressing **AUX**. Silent Mode works by pressing **AUX** for less than one second before locking or unlocking. An optional auxiliary function such as trunk release may be controlled by pressing and holding **AUX** for approximately two seconds.

Button

The remote start function of your system is controlled by pressing this button for one second.

and **AUX** Buttons

Car Finder is controlled by pressing these two buttons.


and and **AUX Buttons**

When simultaneously pressed these buttons control the optional rear window defogger during remote starting. The parking lights flash three times to confirm activation. Once activated the defogger will turn on whenever the vehicle is remote started.

The parking lights flash twice when the defogger is deactivated. The defogger does not turn on when the vehicle is remote started.

Important note: Defogger is an optional feature. Additional parts and labor may be required. See your Directed dealer for details.

and **Buttons**


Timer mode is activated when these buttons are pressed simultaneously. When you activate timer mode the parking lights flash four times, after a 1-second delay the engine starts. To turn the engine off, without exiting timer mode press the .

The system remains in timer mode and will start every 3 hours for a maximum of 6 starts unless cancelled by turning on the ignition, or by activating the brake or neutral safety shutdown wires.

The parking lights flash 4 times indicating timer mode is exited.


Using the system

Locking

Pressing  for one second locks the system (if the door locks are connected). The horn honks and the parking lights flash once to confirm the system is locked. The Failsafe® Starter Kill also activates and prevents the vehicle's starter from cranking.


Important note: Horn honk and Failsafe are both optional features.

Unlocking

Pressing  for one second unlocks the doors (if connected). The horn honks twice and the parking lights flash twice to confirm unlocking of the system. The Failsafe Starter Kill is deactivated.




Disabling (optional) Starter Kill

If your remote control is lost or damaged, you can manually override the starter kill. To do this, you must have the vehicle's ignition key and know where the Valet button is located. Be sure to check with the installer for the location of the Valet button.

To override the starter kill, turn the ignition on and press  and release the valet button within 10 seconds. The vehicle should start. If it does not start, you may have waited too long; turn the ignition off and repeat the process.

Location of Valet button: _____

Panic Mode

If you are threatened in or near your vehicle, you can attract attention by triggering the system with your remote control. Press  for approximately two seconds to enter Panic Mode. In Panic Mode, the horn will honk and the parking lights will flash for 30 seconds. To stop Panic Mode at any time, press , or  on the remote control.

Note: In order for Panic Mode to be effective, the vehicle's horn (or optional siren) and the vehicle's parking lights must be connected.


Remote Start

This feature allows you to remotely start and run your vehicle for a programmable period of time. This makes it possible to warm up the engine, and adjust the interior temperature of the vehicle with the climate control system. If interior heating or cooling is desired, the climate controls must be preset, and the fan blower must be set to the desired level prior to remote starting the vehicle.



Warning! (1) Never remote start your vehicle when the keys are in the ignition, except when performing Valet Take-Over, and (2) Never start the vehicle if it is not in PARK or NEUTRAL

To remote start the vehicle:

- Press the  button on the remote control for 1 second.
- The parking lights flash to confirm that the vehicle is attempting to start. In gasoline vehicles the engine will start 4 seconds after the parking lights flash, in diesel vehicles the engine starts after the WAIT-TO-START timer has expired.
- Once the vehicle has started, it will run for the pre-programmed period of time (12, 24, or 60 minutes) or until a shutdown input