

PIXMA MG5500 series Setup Guide

© CANON INC. 2013

Setup Guide

This guide provides information for setting up a network connection for the printer.

Network Connection

Wireless Connection

Preparation for Connection Printer Setup Setup Procedure Selection Push Button Method Standard setup WPS Other setup (Advanced setup) Disable WEP WPA/WPA2

Character Entry

Troubleshooting

Network Connection

Wireless Connection

Preparation for Connection

Before Starting Wireless Connection Setup

 Make sure that the printer is turned on. If the power is on, the (white) POWER lamp (A) will be lit.



Notes on Wireless Connection

• Make sure that the computer is connected to the access point (A) (or wireless network router) you want to connect your printer to. For details on how to check the settings, refer to the manual supplied with the router or contact its manufacturer.



- The configuration, router functions, setup procedures and security settings of the network device vary depending on your system environment. For details, refer to the manual of your network device or contact its manufacturer.
- Check if your device supports IEEE802.11n (2.4 GHz), IEEE802.11g or IEEE802.11b.
- If your device is set to the "IEEE802.11n only" mode, WEP or TKIP cannot be used as a security protocol. Change the
 security protocol for your device to something other than WEP and TKIP or change the setting to something other than
 "IEEE802.11n only."
- For office use, consult your network administrator.
- Take added care when connecting to a network that is not protected with security measures, as there is a risk of disclosing data such as your personal information to a third party.

Printer Setup

1. Press the HOME button (A) on the printer.



2. Use the **A** or **T** button (A) to display the WLAN icon.



- 3. Press the left Function button (B).
- 4. Select Wireless LAN setup, then press the OK button.

The (blue) Wi-Fi lamp (C) lights up when wireless connection is enabled.

3 Setup Procedure Selection

The printer will automatically search for compatible access points.

* If the Push Button Method screen is displayed on the printer

When you are unsure if your access point or router supports this technology, press the Stop button. Proceed to the screen for Standard setup.

To start setup, press and hold the WPS button on the access point, then press OK of the device.
point, then press OK of the device.

Push Button Method \rightarrow **4**-A



-A Select the most suitable connection method from the following.

- Standard setup \rightarrow **3**-B Connect to Access Point by entering the Network Password
- WPS → ④-C Connect to WPS-compatible Access Point
- Other setup (Advanced setup) → ④-D
 Connecting to the Network by Entering the Access Point's Settings
 Directly on the Printer

When using WEP key number 2, 3 or 4, select "Advanced setup".

O-A Push Button Method

Onnection Using WPS

1. Press and hold the WPS button on the access point. For details on pressing the WPS button, refer to the access point manual.



- 2. Press the OK button on the printer within 2 minutes. The (blue) Wi-Fi lamp on the printer flashes while searching for or connecting to the access point.
- 3. When the left screen appears, press the OK button.



O-B Standard setup

Onnection via Standard setup

1. Select Standard setup.



- 2. Press the OK button.
- 3. Select your access point, then press the OK button.



4. One of the screens below will be displayed on the printer.



- 5. Press the OK button.
- 6. Enter the network password (WEP key or passphrase). Character entry is case-sensitive.



- 7. Press the left Function button.
- 8. Make sure that the network password is correct. Character entry is case-sensitive.

Enter WEP key
5-26 characters OK Enter/edit
End setup

9. Press the left Function button.

10. When the left screen appears, press the OK button.



O-C WPS

Connection Using WPS

1. Select WPS.



- 2. Press the OK button.
- 3. Select Push button method.



- 4. Press the OK button.
- 5. Press the OK button.



6. Press and hold the WPS button on the access point. For details on pressing the WPS button, refer to the access point manual.



- 7. Press the OK button on the printer within 2 minutes. The (blue) Wi-Fi lamp on the printer flashes while searching for or connecting to the access point.
- 8. When the left screen appears, press the OK button.



O-D Other setup (Advanced setup)

Onnection via Advanced setup

1. Select Other setup.



- 2. Press the OK button.
- 3. Select Advanced setup.



- 4. Press the OK button.
- 5. Select your access point, then press the OK button.



6. Select the security protocol used by the access point, then press the OK button.





7. When the left screen appears, press the OK button.





7. Select the WEP key number you want to use.



8. Press the OK button.

9. Press the OK button.



10.Enter the WEP key.

Character entry is case-sensitive.



- 11. Press the left Function button.
- 12.Make sure that the WEP key is correct.



13.Press the left Function button.

14. When the left screen appears, press the OK button.

