




Quick Reference Guide

Digital Proprietary Telephone

Model No. KX-DT333/KX-DT343/KX-DT346

Thank you for purchasing a Digital Proprietary Telephone (DPT). Please read this manual carefully before using this product and save this manual for future use. For more details, please refer to the manuals of the PBX.

Accessories (included)*1

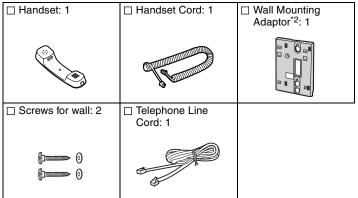

- ^{*1} For extra orders for the accessories, call toll-free: 1-800-332-5368.
- *2 This telephone comes with the wall mounting adaptor already attached. To remove the adaptor, refer to step 1 on page 17.

This unit supports the following optional devices and features:

	KX-DT333	KX-DT343	KX-DT346	
Features				
Display	3-Line	3-Line	6-Line	
Flexible Buttons	24	24	24	
LCD Backlight		>	√	
Options				
KX-NT303 Add-on 12 Key Module		~	✓	
KX-NT307 (PSLP1528) Bluetooth [®] Module ^{*1 *2 *3}		>	~	
KX-DT301 USB Module ^{*3}		~	~	
KX-DT390 DSS Console (with 60 keys) ^{*2}	~	~	~	

✓: Available


*1 The availability of the Bluetooth Module depends on the software version of the connected PBX. Consult your dealer for more details.

- ^{*2} For information on connecting, refer to the each included manual.
- *3 When connecting DPTs via Digital XDP, this optional device cannot be used.

Trademark:

The Bluetooth[®] word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Panasonic Corporation is under license.

Location of Controls

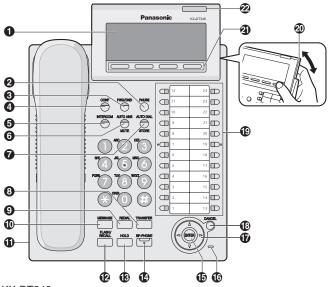

<KX-DT346>

- LCD (Liquid Crystal Display)
- **2 PAUSE:** Used to insert a pause when storing a telephone number. This button is also used for programming this unit.
- FWD/DND (Call Forwarding/ Do Not Disturb): Used to set Call Forwarding or Do Not Disturb on your extension.
- CONF (Conference): Used to establish a multiple party conversation.

- **INTERCOM:** Used to make or receive intercom calls.
- O AUTO ANS (Auto Answer)/ MUTE: Used to receive an incoming call in hands-free mode or mute the microphone/handset during a conversation.
- AUTO DIAL/STORE: Used for System/Personal Speed Dialing or storing program changes.

Location of Controls

- **TRANSFER:** Used to transfer a call to another party.
- **③ REDIAL:** Used to redial the last dialed number.
- MESSAGE: Used to leave a message waiting indication or call back the party who left the message waiting indication.

Headset Jack

- FLASH/RECALL: Used to disconnect the current call and make another call without hanging up.
- **HOLD:** Used to place a call on hold.
- SP-PHONE

(Speakerphone): Used for performing hands-free operations.

- ENTER: Used to assign the selected item.
- Microphone: Used for hands-free conversations.

- **()** Navigator Key: Used to adjust the volume and the display contrast or select desired items.
- CANCEL: Used to cancel the selected item.
- Flexible Buttons: Used to seize a CO line or perform a feature that has been assigned to the key.
- **LCD Panel:** Can be adjusted to the desired angle.
- Soft Buttons (S1-S4): S1-S4 (located from left to right) are used to select the item displayed on the bottom line of the display.
- Message/Ringer Lamp: When you receive an intercom call, the lamp flashes green, and on an outside call, the lamp flashes red. When someone has left you a message, the lamp stays on red.

Settings

r		
Speaker volume	While in a hands-free	
	conversation	
Handset/Headset	While using the handset or	
volume ^{*1}	headset	
Ringer volume	While on-hook or receiving a call	Press Up to increase
ninger volume	writte on-nook of receiving a call	or Down to decrease
		the volume.
LCD Contrast	While on-hook	
	$\begin{array}{c} PAUSE \\ \bigcirc \end{array} \blacktriangleright \bigcirc \bigcirc \bigcirc \bigcirc \\ \bullet \\ \bullet$	
)))))))))))))))))))))))))))))))))))))))	
Ring Tone	$\begin{array}{c} \text{PAUSE} \\ \bigcirc \\ \bigcirc \\ & \bigcirc \\ \\ \\ & \bigcirc \\ \\ & \bigcirc \\ \\ \\ \\$	
	PAUSE (00)	PAUSE
	INTERCOM (30)	
		STOPE
	Press 2 times.	(SIURE)
LCD Backlight*2	While on-hook	
	PAUSE ○ ● ① ④ ► O R AUTO DIAL STORE	 Automatic Always ON Always OFF
	► OR AUTO DIAL STORE	


- ^{*1} If you hear your own voice through the handset or headset, decrease the volume.
- *2 For KX-DT343/KX-DT346 only.


Features List

Icon Meanings


 $\begin{array}{c} (\bigcirc \\ (CO) \end{array} = \mathsf{Flexible button} \qquad \qquad \textcircled{\begin{subarray}{c} \blacksquare \\ \bigcirc \end{array} = \mathsf{Feature number} \qquad \qquad \textcircled{\begin{subarray}{c} \blacksquare \\ (\pounds \\ \pounds \\ \hline \end{array} = \mathsf{Talk} \qquad \qquad \textcircled{\begin{subarray}{c} \blacksquare \\ \blacksquare \\ \sub{\begin{subarray}{c} \blacksquare \\ \blacksquare \\ \hline \end{array} = \mathsf{Confirmation Tone} \end{array} }$


Making Calls

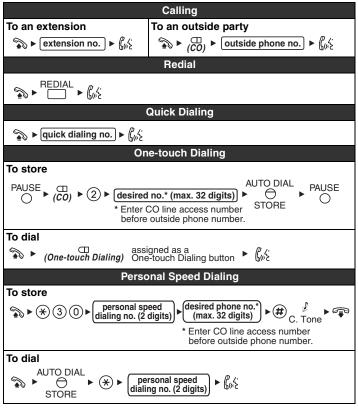

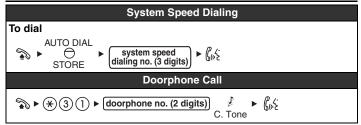


During a Conversation

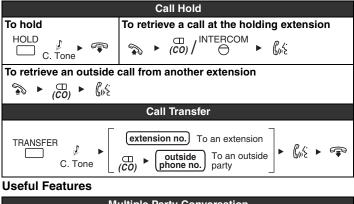


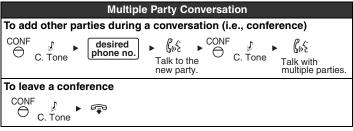


Features List

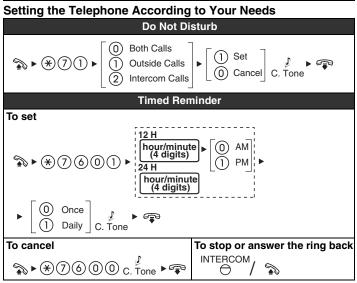

Before Leaving Your Desk

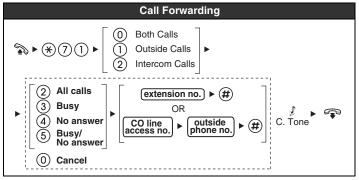

Making Use of the Voice Mail Service

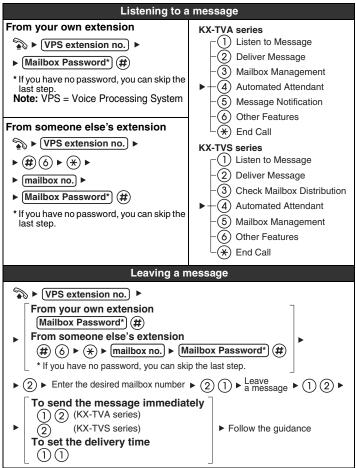

During playback

0 Repeat Voice Guidance

- *) Exit
- Consult your dealer for more details regarding feature numbers.
- It is possible to assign flexible buttons as feature buttons.
- Control panel/button names and descriptions can be found in "Location of Controls" on page 3.

Accessing Features Using the Display

Using the LCD Display

It is possible to access the following directories, logs, and menus by pressing left or right on the Navigator Key while this unit is idle:

Incoming Call Log Outgoing Call Log Personal Speed Dialing Directory System Speed Dialing Directory Extension Number Directory Feature Access

Entering Characters

You can enter alphabetic characters and digits using the dialing buttons. Pressing a dialing button repeatedly displays different characters, as shown in the following tables. While entering characters, you can move the cursor with the left and right Navigator keys and delete characters with the TRANSFER button. To toggle between Table 1 and Table 2, press the Soft button (S1) at any time while entering characters. For a list of available characters, refer to the next page.