Sales : 0800 298 8011



#### **Proprietary Telephones**

## Quick Reference Guide KX-T7720/KX-T7730 KX-T7731/KX-T7735 Model KX-T7736/KX-T7750

### Important Information

#### When you ship the product:

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a postage-paid letter, detailing the symptom to the outside of the carton. DO NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.

#### **Product service:**

Panasonic Servicenters for this product are listed in the servicenter directory. Consult your authorized Panasonic dealer for detailed instructions.

#### WARNING:

TO PREVENT THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.

THIS HANDSET EARPIECE IS MAGNETIZED AND MAY RETAIN SMALL FERROUS OBJECTS.

#### **IMPORTANT NOTICE:**

Under power failure conditions, this telephone may not operate. Please ensure that a separate telephone, not dependent on local power, is available for use in an emergency.

#### Note:

In this manual, the suffix of each model number is omitted.


Included Accessories: for extra orders, call toll free 1-800-332-5368


- Handset ..... 1
   Telephone Line Cord ..... 1
- Handset Cord . . . . . . 1


For your future reference	
SERIAL NO(found on the bottom of the unit)	DATE OF PURCHASE
NAME OF DEALER	
DEALER'S ADDRESS	
DEALER'S TEL. NO.	


Please read this manual before using and save for future reference.


$\bigcirc$ Outside (CO) Line button $\overset{PF}{\longrightarrow}$ Programmable Feature button       Feature number $\checkmark$ Off-hook $\bigcirc$ On-hook $\bigcirc$ Talk       * "Location of Controls" is shown on page 8.	
Desired Feature	Operation
Making Calls	
Calling	To an extension       To an external party         Image: Second system       Image: Second system       Image: Second system       Image: Second system         Image: Second system       I
Redial	$ \qquad \qquad$
One-Touch Dialing	To program         PROGRAM $\bigcirc$
Calling an operator	
Speed Dialing (Personal)	To set       2 ★ KX-TA624         3 0 KX-TA1232       ▶ personal speed dial no.         (Check the type of your Main Unit.)         ▶ desired no.       ★ # ▶
	To dial $ \begin{array}{c} & & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ & \\ $
Speed Dialing (System)	To dial $\swarrow$ $\blacktriangleright$ $\bigcup_{\text{store}}^{\text{AUTO DML}}$ $\blacktriangleright$ system speed dial no. $\blacktriangleright$ $\int_{(t)}^{t}$

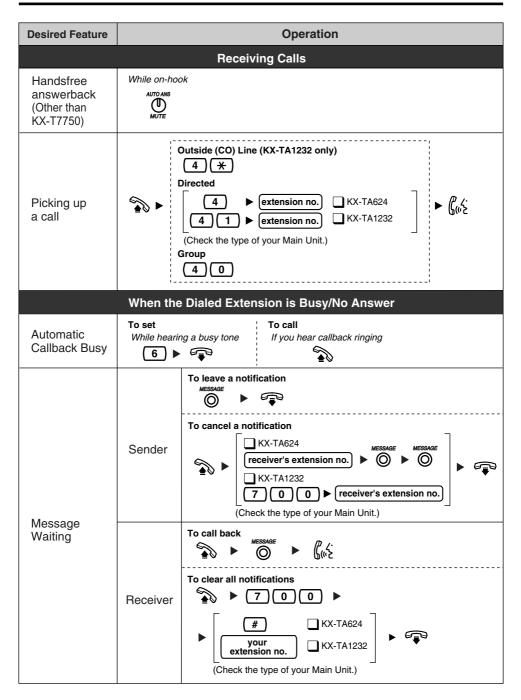

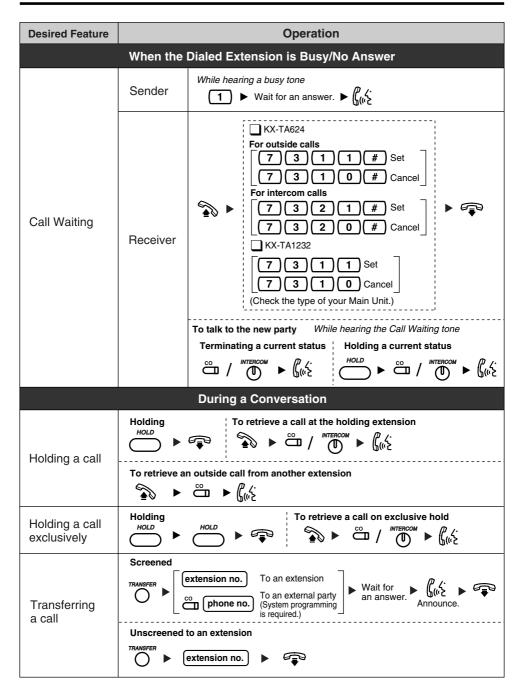

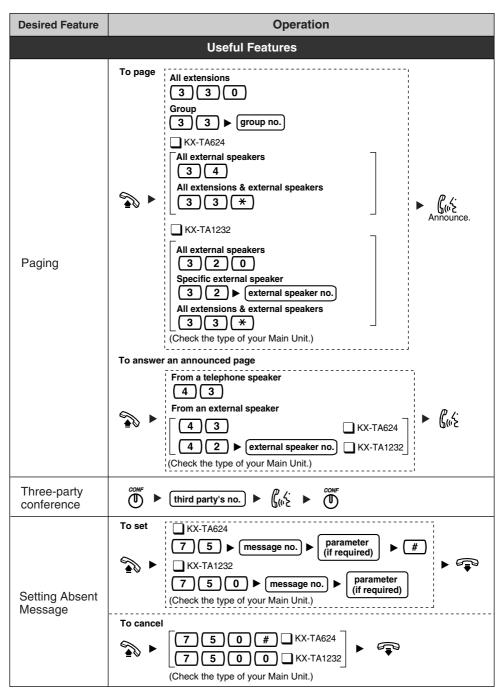


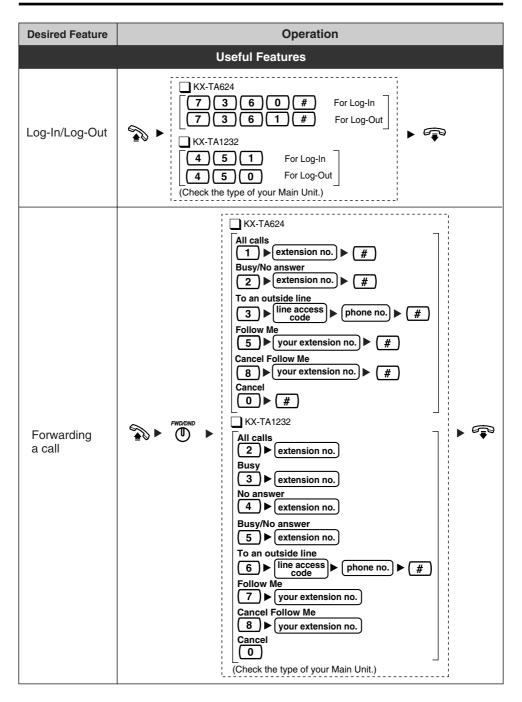

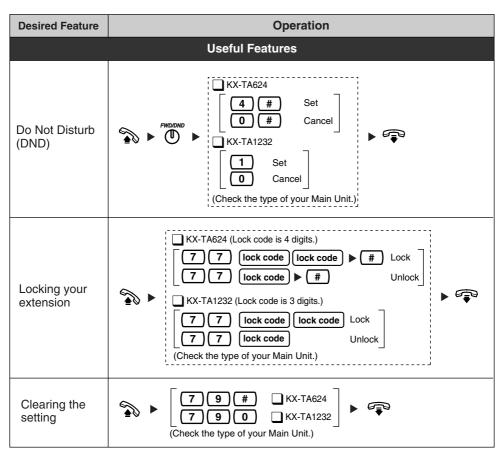

\* Consult your dealer for more details on the operations above.

## Location of Controls

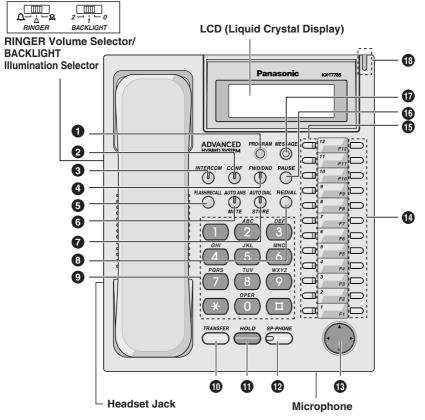


- \* The KX-T7750 does not have a microphone.
- \* The backlit display is only available on the KX-T7730/7731/7735/7736.
- \* The headset is an option. Recommended headsets are
  - KX-TCA91 and KX-TCA92.



**PROGRAM:** Used to enter and exit the programming mode.



 2 CONF (Conference): Used to establish a multiple party conversation.





**FLASH/RECALL:** Used for External Feature Access or to disconnect the current call and make another call without hanging up.



#### AUTO ANS (Auto Answer)

(Other than KX-T7750): Used to receive an incoming call in the hands-free mode.

MUTE (Other than KX-T7750): Used to mute the microphone during a conversation.


VOICE CALL (KX-T7750 only): Used to receive a notification via monitor in place of ringing.




**REDIAL:** Used to redial. 8

# Location of Controls


DIALING BUTTONS WITH BACKLIGHT

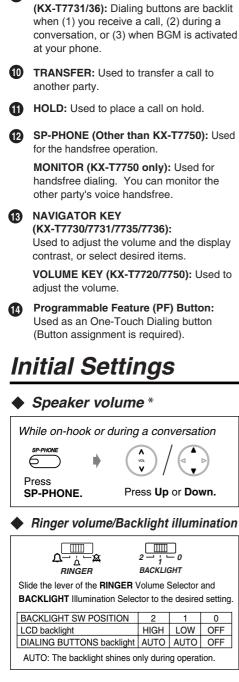

- Flexible Outside (CO) Line Button: Used to make or receive an outside call. Pressing this button seizes an idle outside line automatically. (Button assignment is required.) Also used as feature buttons. (Button assignment is required.)
- **PAUSE:** Used to insert a pause during dialing.
- MESSAGE: Used to leave a message waiting indication, or call back the party who left the message waiting indication.
- Message/Ringer Lamp: The Message/ Ringer lamp informs you visually that you have a message or a call.
  - When you receive a call, the lamp flashes depending on the ringing pattern. When the ringing pattern is set to Single (Slow flash), Double (Moderate flash), or Triple (Rapid flash) in your PBX, the lamp flashes. When the other ringing patterns are set in your PBX, the lamp may not flash. (e.g., S-Double, Call Waiting Tone1).
  - When someone has left you a message, the lamp is lit continuously.

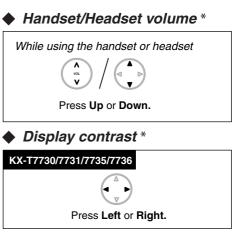


\* The above settings may return to default settings if the telephone line cord is disconnected, or the main unit's power is interrupted.

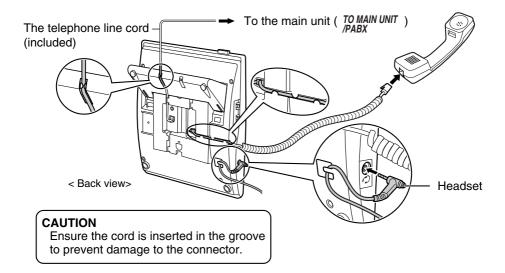


## Wall Mounting

1 Pull down the handset hook until it locks, so the tab holds the handset.

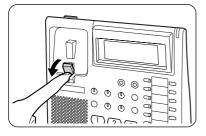


3 Mount the unit on the wall.

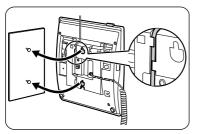

\* KX-T7735 model illustrated on this page.

2 Remove the attached stand.

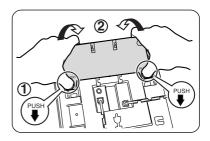

To temporarily place the handset down during a conversation, hook it over the top edge of the phone as shown.

